 


Flip - Caller 788
Flip - Caller 788
Flip - Caller 788
Flip - Caller
Flip - Caller
Flip - Caller
Flip - Caller
Flip - Caller
Flip - Caller



Instruction Manual


Flip-Caller 788

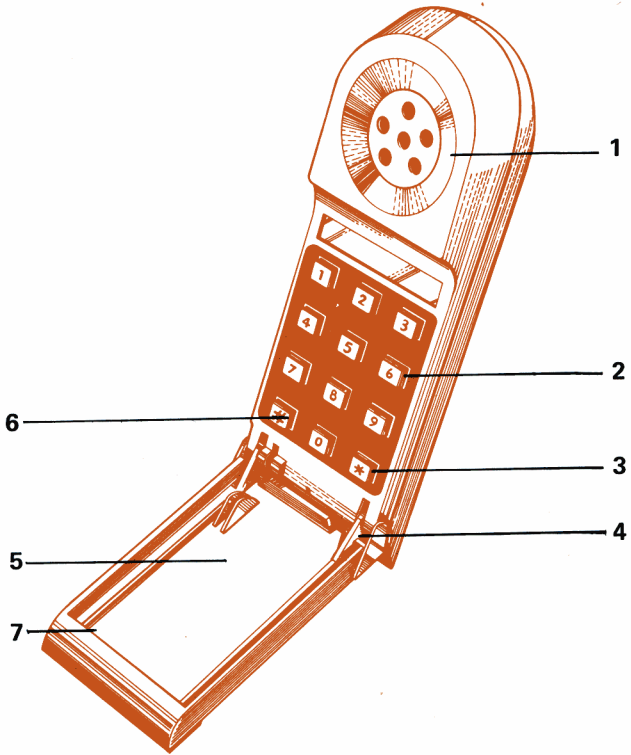


- 1) Receiver
- 2) Numeric Keyboard
- 3) Last No. Redial Button (for pulse dialing version only).
- 4) Transmitter
- 5) Directory
- 6) Dial Tone Reset Button
- 7) Mouth Piece

Installation Instruction for U. S. A.

1. Connect the modular male plug of 788 into the modular wall jack.

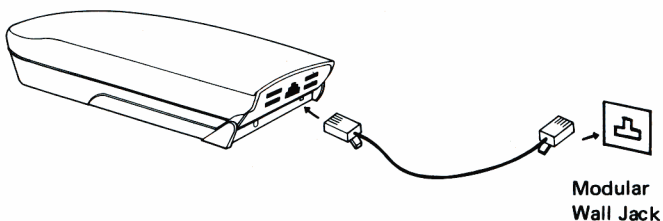


2. If you have a 4 prong socket instead of a modular wall jack, then a modular to 4 prong adaptor should be used.

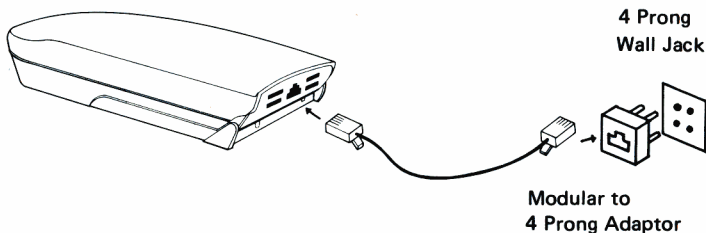

For non U. S. A. users

3. Connect the red and green terminals of the cable coming out from the 788 to the wall junction box.

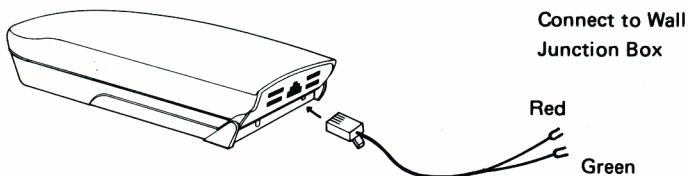

Operating Procedure

1. Directory Installation

Fill in your frequently called or emergency numbers on the provided directory card. Peel off the protective layers of the double side tapes at the back of the card and stick it onto the depression of the hinged mouth piece.

2. Manual Dialing

- 1) pick up the telephone and the mouth piece will flip out automatically.
- 2) After listening for the dial tone, key in the number you want to call and dialing will start after the first digit has been entered.

3. To stop Dialing

When the telephone is folded up the Dial Tone Reset Button is depressed and the phone is in "on hook" condition. When the phone is picked up, it goes "off hook" with the Dial Tone Reset Button released and the phone line is engaged. Dialing can be stopped either

- a) by pressing the # key for a couple of seconds. Then release it to reaccess the line.
- b) or by folding the mouth piece to hang up.

4. Last number redial (for pulse dialing versions only)

If the line is busy, hang up or reaccess line as instructed in section 3.

Any time you want to redial the last busy number, you can simply press the * key.

5. To avoid damage, never use abrasive, strong cleaners or solvents to clean any part of the telephone or cord. use a damp (not wet) cloth and mild nonabrasive detergent.

Remark:

When not in use, your Flip Caller should be placed on a flat surface.