

X-Press Callmaker

Push-button operation

Space saving:- combined telephone and callmaker

Single-button repeat-calling



Description

The X-Press Callmaker is an ivory-coloured telephone with twelve black push-buttons. It can be used as a normal push-button telephone, but it has two additional features – a ten-number Callmaker and single-button repeat-calling.



Facilities

The X-Press Callmaker has three functions:-

- i) As a callmaker, it has the capability of storing up to ten telephone numbers, including the appropriate STD or IDD codes. Each number button corresponds to one of the ten stores (e.g. button '5' could store your home telephone number). The extra two buttons marked 'T' and 'P' are used for calling and for entering numbers into the store.
- ii) 'Repeat-last-number-called' facility – this enables you to recall the last manually-called number.
- iii) The X-Press Callmaker can also be used as a normal push-button telephone.

How it operates

To use as a callmaker, you first have to enter numbers into the store. You do this as follows:

Lift the handset, press and hold down button 'P' and press and release the numbered button which corresponds to the store which you have selected for your number. Enter the telephone number that you wish to store, including the STD or IDD code if applicable. Release button 'P' and replace the handset. The number is now stored under the selected number button.

Note: While button 'P' is held down, the telephone will not call the numbers which you are pressing.

To transmit a stored number, lift the handset, wait for dial tone, press and release the 'T' button, and then press and release the appropriate number button. This automatically calls the telephone number which is stored in the memory under that particular button.

To recall the last manually-called number, lift the handset, listen for dial tone, and then press the 'T' button twice. This automatically recalls the last manually-called number.

Note: These actions will not recall telephone numbers which are stored in the Callmaker.

To use as a normal push-button telephone, simply raise the handset and, after obtaining dial tone, use the push-buttons to call your number.

The procedure for changing numbers in the store is the same as for entering them. Should you wish to erase a stored number without putting in a new one, raise the handset, press and hold down button 'P', press and release the store button which you want to erase, release button 'P' and replace the handset.

General information

The X-Press Callmaker can also be used on extensions from most types of PBXs or Call Connect Systems, although the operating procedures vary slightly. These are explained fully in the operating instructions provided.

In certain circumstances, the X-Press Callmaker will need to be powered from a wall-mounted mains unit. In this case, a 3-pin socket outlet of at least 2-amp rating has to be provided by the customer. The dimensions of the X-Press Callmaker are the same as a normal push-button telephone (146mm X 229mm X 121mm).

Please Note:

We do our best to supply our customers with the apparatus they ask for but we may have to provide apparatus which does not accord exactly with the descriptions, illustrations and shades of colours shown in this leaflet.

Your Telephone Sales Office will gladly supply any further information or details of any changes in the information in this leaflet since it went to print. The address, telex and telephone numbers are shown in the preface of your Telephone Directory.

Information on a wide range of our services and apparatus is contained in the Green Pages section of most Telephone Directories.