



- NOTES:**
- FUSE: 15A PER CIRCUIT
 - 2 SHELF JACK POINTS U5-U11 & U13-U15 MAKE CONTACT WHEN RELAY SET IS REMOVED.
 - 3 WORKING TO CB (40V) STRAP U57-U59 & U63-U65 WORKING TO CB (22V) STRAP U57-U59 & U63-U65 & U67-69 WORKING TO AUTO WITH DISCONNECT CLEARING STRAP U63-65 WORKING TO MAGNETO OR C.B.S FIT ADAPTOR CCTS. SAW B1550 OR SAW B1540 OR EQUIV.
 - 4 D RELAY IS DIFFERENTIALLY CONNECTED
 - 5 STRAP BETWEEN SHELF JACK POINTS U68-U70 IS ONLY REQD. ON EXCH. LINES WHICH ARE USED FOR NIGHT SERVICE
 - 6 WHEN ENQUIRY FACILITIES ARE NOT PROVIDED STRAP U27 TO EARTH AT U11 TO GIVE OPERATOR RECALL
 - 7 Ø FOR WIRING SEE RELEVANT RACK COMMON SERVICES DIAGRAM.
 - 8 EXTERNAL WIRING SHOWN THUS — 0 — IS PROVIDED WHEN EXCHANGE LINE CCT IS ASSOCIATED WITH NIGHT SERVICE VIA N/S ACCESS CCT SAWB1520 OR EQUIV.
 - 9 CUIT STRAP U71-73 WHEN EXCH. LINE CCT IS WIRED FOR OUTGOING MANUAL ACCESS ONLY
 - 10 TO CATER FOR OPERATOR RECALL ON OUTGOING ONLY EXCHANGE LINES FROM THE AUTO. EQUIPMENT A JACK AND CALL LAMP SHOULD BE FITTED EXCEPT AT SATELLITE INSTALLATIONS FOR EXCHANGE LINES HAVING OUT-GOING MANUAL ACCESS ONLY THE LAMP JACK & LAMP ARE NOT REQD.

RH disconnected
RH 1 3 4 Spare
RH rewired for recall
 11 FOR N/S to Norton Folgate remove wire from SR7 and wire from U73 to SR6. Leave SR7 diss. Leave H25 diss also.
H 25 DISS
SR 3 DISS

BATT BK (22 SWG) FUSE (G3) U12.
 ETH R (22 SWG) ETH BAR (G4) U11
 BATT W U12-BR2-LG6-NS6-NC-ST2-SR2-ZR2-RH2-CL2-CR2-R4b-R5b-R3b-R10b-R11b.
 ETH R U11-AC2-DI-BR1-CL1-LG3-ZR4-ZR5-HI-ST3-SR3-SR4-SR5-SR6-SR7-SR8-ER23-CL1-CR1-CR2-MH2-MH2-R2a-R2a-TWO UED

EXCHANGE LINE CIRCUIT PABX No. 3	
AMENDMENT PARTICULARS	ISS. DATE APP
G.P.O. APPROVED AS STANDARD	31-1-58
G.E.C. - A.E.I. TELECOMMUNICATIONS LTD. COVENTRY. ENGLAND.	DRN [Signature] [Signature] [Signature] [Signature]
SAW 81582	